MX-E750
MX-E751
MX-E760
MX-E761
MX-E770
MX-E771

MINI-Compact System

MP3-CD/WMA-CD/CD-R/RW Playback

user manual

Imagine the possibilities

Thank you for purchasing this Samsung product.
To receive more complete service,
please register your product at

www.samsung.com/register

SAMSUNG

Downloaded From Disc-Player.com Samsung Manuals

Safety Warnings

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER(OR BACK).
NO USER-SERVICEABLE PARTS ARE INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

This symbol indicates "dangerous voltage" inside the product that presents a risk of electric shock or personal injury.	**CAUTION** : TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.	This symbol indicates important instructions accompanying the product.

CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN

WARNING

- To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

CAUTION

- Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- The Mains plug is used as a disconnect device and shall stay readily operable at any time.
- This apparatus shall always be connected to an AC outlet with a protective grounding connection.
- To disconnect the apparatus from the mains, the plug must be pulled out from the mains socket, therefore the mains plug shall be readily operable.

CLASS 1	LASER PRODUCT
KLASSE 1	LASER PRODUKT
LUOKAN 1	LASER LAITE
KLASS 1	LASER APPARAT
PRODUCTO	LÁSER CLASE 1

CLASS 1 LASER PRODUCT

This Compact Disc player is classified as a CLASS 1 LASER product.
Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

CAUTION

- INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS DEFEATED, AVOID EXPOSURE TO BEAM.

Accessories

Check for the supplied accessories below.

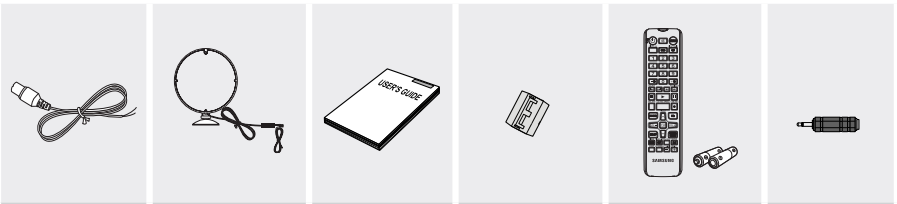

FM Antenna (Optional)	FM/AM Antenna (Optional)	User's Manual	Toroidal Ferrite core (1 EA) (For Power cable) (Optional)	Remote Control/ Batteries(Optional)	Connector-Adaptor (Optional)

- Figures and illustrations in this User Manual are provided for reference only and may differ from actual product appearance.
- An administration fee may be charged if either
  a. an engineer is called out at your request and there is no defect in the product (i.e. where you have failed to read this user manual)
  b. you bring the unit to a repair centre and there is no defect in the product (i.e. where you have failed to read this user manual).
- The amount of such administration charge will be advised to you before any work or home visit is carried out.

Symbols Important Note

Downloaded From Disc-Player.com Samsung Manuals

Precautions

- Ensure that the AC power supply in your house complies with the identification sticker located on the back of your product.
- Install your product horizontally, on a suitable base (furniture), with enough space around it for ventilation (7.5~10cm).
- Do not place the product on amplifiers or other equipment which may become hot. Make sure the ventilation slots are not covered.
- Do not stack anything on top of the product.
- Before moving the product, ensure the Disc Insert Hole is empty.
- In order to disconnect the product completely from the power supply, remove the AC plug from the wall outlet, especially when left unused for a long period of time.
- During thunderstorms, disconnect the AC plug from the wall outlet. Voltage peaks due to lightning could damage the product.
- Do not expose the product to direct sunlight or other heat sources. This could lead to overheating and malfunction of the product.
- Protect the product from moisture, and excess heat or equipment creating strong magnetic or electric fields (i.e. speakers.).
- Disconnect the power cable from the AC supply if the product malfunctions. Your product is not intended for industrial use.
- Use of this product is for personal use only.
- Condensation may occur if your product or disc has been stored in cold temperatures. If transporting the product during the winter, wait approximately 2 hours until the product has reached room temperature before using.
- The batteries used with this product contain chemicals that are harmful to the environment. Do not dispose of batteries in the general household trash.
- Maintain an open space of approximately 6 inches (15 cm) on the sides and rear of the system, for ventilation purposes.
- Place the loudspeakers at a reasonable distance on either side of the system to ensure good stereo sound.
- Direct the loudspeakers towards the listening area.

Cautions on Handling and Storing Discs

Small scratches on the disc may reduce sound and picture quality or cause skipping.

Be especially careful not to scratch discs when handling them.

Holding discs

- Do not touch the playback side of the disc.
- Hold the disc by the edges so that fingerprints will not get on the surface.
- Do not stick paper or tape on the disc.

Disc Storage

- Do not keep in direct sunlight
- Keep in a cool ventilated area
- Keep in a clean Protection jacket.
  Store vertically.
- Do not allow the discs to become contaminated with dirt.
- Do not load cracked or scratched discs.

Handling and Storing Discs

If you get fingerprints or dirt on the disc, clean it with a mild detergent diluted in water and wipe with a soft cloth.

- When cleaning, wipe gently from the inside to the outside of the disc
- Condensation may form if warm air comes into contact with cold parts inside the product. When condensation forms inside the product, it may not operate correctly. If this occurs, remove the disc and let the product stand for 1 or 2 hours with the power on.

Disc Types And Disc Format

This product does not support Secure (DRM) Media files.

CD-R Discs

- Some CD-R discs may not be playable depending on the disc recording device (CD-Recorder or PC) and the condition of the disc.
- Use a 650MB/74 minute CD-R disc.
  Do not use CD-R discs over 700MB/80 minutes as they may not be played back.
- Some CD-RW (Rewritable) media, may not be playable.
- Only CD-Rs that are properly "closed" can be fully played. If the session is closed but the disc is left open, you may not be able to fully play the disc.

CD-R MP3 Discs

- Only CD-R discs with MP3 files in ISO 9660 or Joliet format can be played.
- MP3 file names should contain no blank spaces or special characters (. / = +).
- Use discs recorded with a compression/decompression data rate greater than 128Kbps.
- Only files with the ".mp3" and ".MP3" extensions can be played.
- Only a consecutively written multisession disc can be played. If there is a blank segment in the Multisession disc, the disc can be played only up to the blank segment.
- If the disc is not closed, it will take longer to begin playback and not all of the recorded files may be played.
- For files encoded in Variable Bit Rate (VBR) format, i.e. files encoded in both low bit rate and high bit rate (e.g., 32Kbps ~ 320Kbps), the sound may skip during playback.
- A maximum of 999 tracks can be played per CD.
- Supported Audio Formats:WMA 56~128kbps Bit rate.

Downloaded From Disc-Player.com Samsung Manuals

Contents

Thank you for buying this SAMSUNG mini-compact system.
Please take time to read these instructions.
They will allow you to operate your system with ease and take full advantage of its features.

Safety Warnings 2
Accessories 2
Precautions 3
Cautions on Handling and Storing Discs 3
Disc Types And Disc Format 3
Contents 4
Description 4
Top Panel(MX-E760/E761/E770/E771 only) 4
Front Panel 5
Rear Panel 6
Remote Control 7
Attaching the toroidal ferrite core to the Power cable (optional) 7
Display function 7
CD/MP3/WMA-CD Playback 8
Selecting a Track 8
Searching for a Specific Music Passage on a CD 8
Repeat One or All Tracks on the Compact Discs 8
A-B Repeat Playback 9
10 Skip Function 9
CD Programming 9
Checking or Editing the Programmed Tracks 9
Auto Change function 9
Playing USB 10
To Select a Track from USB Device 10
To Search a Folder Quickly 10
To repeat 10
To Use High Speed Search 10
To delete a file 10
To skip next 10 tracks 10
Setting the Clock 11
Timer Function 11
Cancelling the Timer 11
Listening a Radio 12
Selecting a Stored Station 12
Recording Function 12
Recording Speed 13
GIGA SOUND function 13
Selecting EQ Mode 13
Selecting USER EQ Mode 13
Using the DYNAMIC SPOT Mode 13
Using the Stadium Mode 14
Party Function 14
Connecting Microphone 14
Troubleshooting 14
Specifications 15

Description

Top Panel (MX-E760/E761/E770/E771 only)

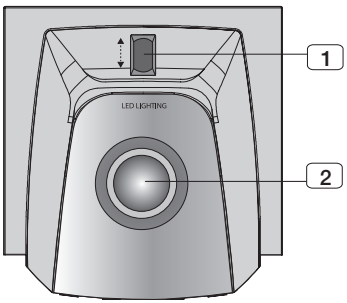

1. LED LIGHTING control
2. LED LIGHTING

You can switch the LED mode to your preference.

Each time you press the **LED LIGHTING** button on main unit, the LED mode will change as following:

OFF → MODE 1 → MODE2

- If you select the **LED OFF**, all of the LED Lightings will turn off.
- If you select the MODE 1, the front LED will turn on and the top LED LIGHTING will turn off.
- If you select the MODE 2, the front LED will turn on and the top LED LIGHTING will turn on.

Downloaded From Disc-Player.com Samsung Manuals

Front Panel

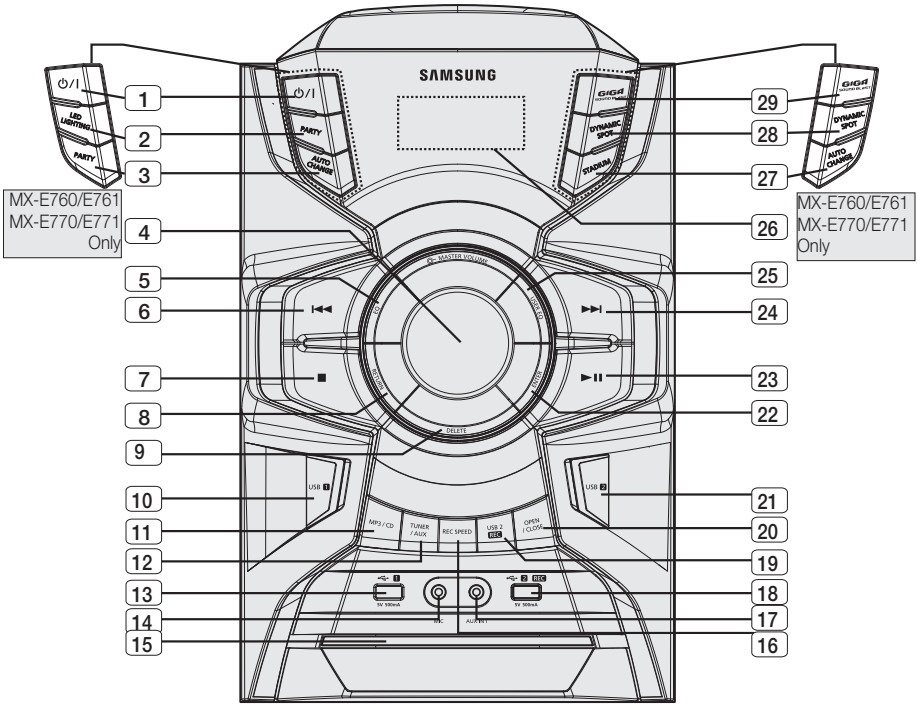

1. POWER button
   - Press this button to switch your mini-compact system.
2. PARTY button (only for MX-E750/MX-E751)
   LED LIGHTING button (only for MX-E760/MX-E761/MX-E770/MX-E771)
3. AUTO CHANGE button (only for MX-E750/MX-E751)
   PARTY button (only for MX-E760/MX-E761/MX-E770/MX-E771)
4. MASTER VOLUME button
5. EQ button
6. Search/Skip button
7. STOP/Tuning Mode button
8. RETURN button
9. DELETE button
10. USB 1 button
11. MP3/CD button
12. TUNER/AUX button
13. USB 1 jack
14. MIC jack
15. Disc Tray
16. REC SPEED
17. AUX IN 1 jack
    Connecting an External Component such as an MP3 player.
    - Connect AUX IN 1 on the front panel of the MINI COMPACT to the Audio Out of the external component/ MP3 player.
    - Press the TUNER/AUX button to select the AUX 1 input. You can select AUX 1 by pressing the FUNCTION button on the remote control.
18. USB 2 REC jack
19. USB 2 REC button
20. OPEN/CLOSE button
21. USB 2 button
22. ENTER button
23. PLAY/PAUSE button
24. Search/Skip button
25. USER EQ button
26. Window display
27. STADIUM button (only for MX-E750/MX-E751)
    AUTO CHANGE button (only for MX-E760/MX-E761/MX-E770/MX-E771)
28. DYNAMIC SPOT button
29. GIGA SOUND BLAST button

Downloaded From Disc-Player.com Samsung Manuals

Rear Panel

MX-E750/E751/E760/E761

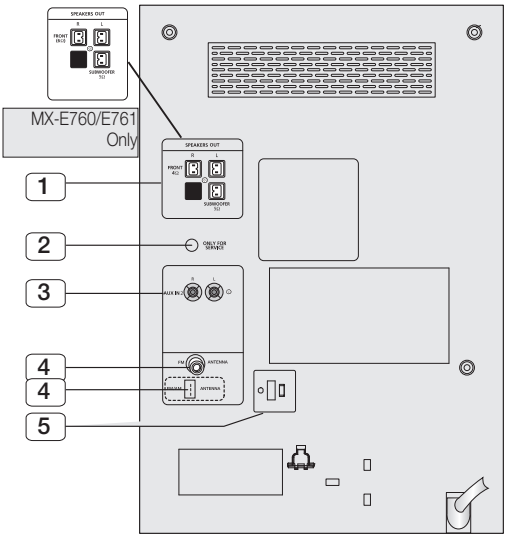

MX-E770/E771

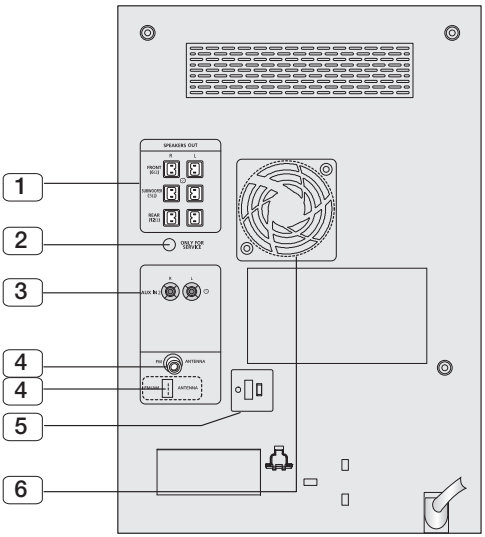

1. 2.1CH Speaker Connector Terminals (MX-E750/E751/E760/E761) 4.2CH Speaker Connector Terminals (MX-E770/E771)

The speakers connector terminals are located on the rear of the system.

1. To achieve the correct sound quality, insert those speaker connector cables to the speaker connector terminals of the system.
   - Left speaker (marked L).
   - Right speaker (marked R).

2. ONLY FOR SERVICE

- This jack is just for testing, please don't use it.

3. AUX IN 2 Terminals

1. Use the Audio Cable (not supplied) to connect AUX IN 2 on the product to Audio Out on the external analog component.
   - Be sure to match connector colors.
   - If the external analog component has only one Audio Out jack, connect either left or right.
   - Press the TUNER/AUX button to select the AUX 2 input.
   - You can select AUX 2 by pressing the FUNCTION button on the remote control.

4. FM/AM(optional) Antenna Connector Terminal

The position of FM antenna connector terminal may differ depending on your region.
This product may not support the AM function depending on your region.

☛ If this product does not receive AM broadcasts.
Connect the FM antenna:

1. Connect the FM antenna (optional) to the FM Antenna jack.
2. Slowly move the antenna wire around until you find a location where reception is good, then fasten it to a wall or other rigid surface.
3. If reception is poor, you may need to install an outdoor antenna. To do so, connect an outdoor FM antenna to the FM socket on the rear of the system using a 75Ω coaxial cable (not supplied).

☛ If this product can receive AM broadcasts. (Optional)
Connect the FM/AM antenna:

1. Plug the connector on the FM/AM antenna (optional) into the FM/AM terminal on the rear of the system.

5. Voltage Selector (Optional)

Check the position of the voltage selector on the rear of the system(optional).

This product may not support the Voltage Selector function depending on your region.

6. Cooling fan (MX-E770/E771 only)

The fan always turns when the power is on. Secure a minimum 10 cm of clear space from all sides of the fan when installing the product.

Downloaded From Disc-Player.com Samsung Manuals

Remote Control

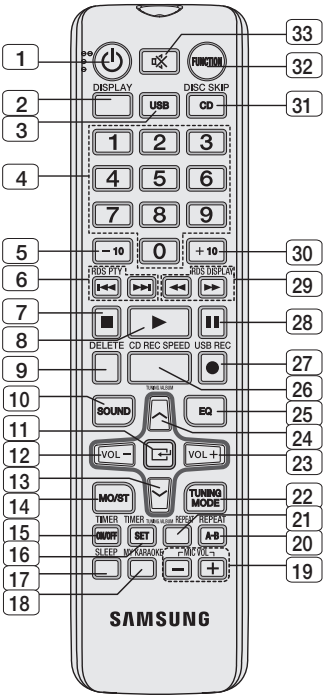

1. POWER
2. DISPLAY
3. USB
4. Number(0~9) button
   During playback, press the desired track number. The selected track is played.
5. -10
6. Skip, RDS PTY *
7. STOP
8. PLAY
9. DELETE
10. SOUND
11. ENTER
12. VOLUME -
13. TUNING/ALBUM ∨
14. MO/ST
15. TIMER ON/OFF
16. TIMER SET
17. SLEEP
    Set a sleep time to shut off the product.
18. MY KARAOKE
19. MIC VOLUME -, +
20. REPEAT A-B
21. REPEAT
22. TUNING MODE
23. VOLUME +
24. TUNING/ALBUM ∧
25. EQ
26. CD REC SPEED
27. USB REC
28. PAUSE
29. SEARCH, RDS DISPLAY*
30. +10
31. CD DISC SKIP*
32. FUNCTION
33. MUTE
    Turn off the sound temporarily.

* This product is not used the **RDS PTY** and **RDS DISPLAY** function printed the ⏮, ⏭ button above.
* This product is not used the **DISC SKIP** function printed the **CD** button above.

Installing batteries in the Remote Control

- Place batteries in the remote control so they match the polarity : (+) to (+) and (–) to (–).
- Always replace both batteries at the same time.
- Do not expose the batteries to heat or a flame.
- The remote control can be used up to approximately 23 feet (7 meters) in a straight line.

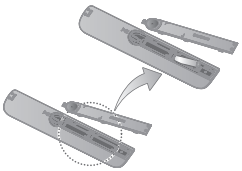

* Battery size: AAA

Attaching the toroidal ferrite core to the Power cable (optional)

If you attach a Toroidal ferrite core to the Power cable, it will help to prevent RF interference from radio signals.

1. Pull the fixing tab of the Toroidal ferrite core to open it.
2. Attach the Toroidal ferrite core to the Power cable as shown and press it until it clicks.

Installing Toroidal ferrite to Power cable

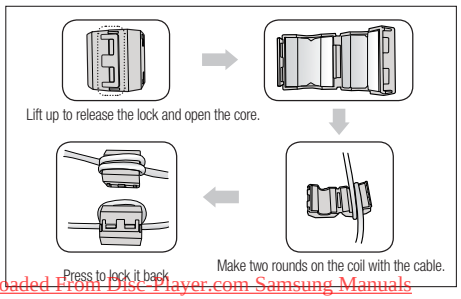

Display function

You can view all functions available on the display, adjust the brightness of the display and select the Display/LED either on or off.

Each time you press the **DISPLAY** button on the remote control, the display mode will change as following:

- **The Demo function**
  All functions available on the system appear on the front panel display.
- **The Dimmer function**
  The Dimmer function is selected and the display darkens.
- **LED OFF**
  The LED is turned off while the dimmer function is working.
- **Clock ON**
  The Clock you set is displayed.
- **LED/Display ON**
  ALL Display and LED turned on.

Downloaded From Disc-Player.com Samsung Manuals

CD/MP3/WMA-CD Playback

You can play 12 cm compact disc without an adapter.

☛ This product is designed to play an audio CD, CD, CD-R, CD-RW, MP3/WMA-CD.

- Gently open or close the CD tray and do not apply excessive force.
- Do not put force or place a heavy object on the product.
- Do not insert an out-of-spec. shape of CD such as a heart or octangle shaped CD. Otherwise, the product may be damaged.
- Care must be taken about maintenance of the compact discs.

1. Press the **OPEN/CLOSE** button to open the disc tray.
2. Place a disc gently into the tray with the disc's label facing up.
3. Press the **OPEN/CLOSE** button to close the disc tray, the disc will be played automatically.
   - For MP3/WMA-CD audio, it may take several minutes to complete scanning the disc tracks.
   - If you play a file with an English name or a MP3/WMA-CD medium in an English title, the song title will be shown in the display. (Other languages besides English may not be indicated.)
   - An English-titled track containing a special character will not show the title in the display.

<CD/MP3/WMA-CD PlaybackDisplay>

4. Adjust the volume according to needs with the following procedures.
   - Tuning the VOLUME knob.
   - Press the Vol + or – button of the remote control. The volume level can be adjust in 31 steps(VOLUME MIN, VOLUME01- VOLUME 29, and VOLUME MAX).
5. Main Unit
   To pause playback temporarily, press the ▶II button. Press ▶II again to continue playing the disc.
   Remote control
   To pause playback temporarily, press the **PAUSE(II)** button.
   Press **PLAY**(▶) button to continue playing the disc.
6. To end playing, press the **STOP** (■) button.

- If there is not one CD inserted in the DISC tray, it is indicated as "NO DISC".
- The quality of MP3/WMA-CD playback may vary depending on the condition of the disc containing the music files or the condition of the recorder with which the disc was created.
- If different types of files or unnecessary folders are on the same disc, you will have problems with playback.
- Keep the tray closed whenever you are not using it, to prevent dust from entering.
- You can load or unload compact disc when the radio, usb or auxiliary source function is selected, and when you press the **OPEN/CLOSE** button, all of the other functions will be changed to MP3/CD mode.
- If no buttons are pressed on the product or remote control for more than 3 minutes when the product is in Pause mode, it will be changed to Stop mode.
- If no buttons are pressed on the product or remote control for more than 25 minutes when the product is in Stop mode, the power will automatically turn off.

Selecting a Track

You can select a desired track while the disc is being played.

To play the previous track

Press the I◀◀ button within 3 seconds after the current track started playing.
Press the I◀◀ button twice at least 3 seconds after the current track started playing.

To play the next track

Press the ▶▶I button.

To play the current track

Press the I◀◀ button 3 seconds later after the current track started playing.

To play the track of your choice

Press the I◀◀ or ▶▶I button to move to a desired track.

- You can also use the Number(0~9) button on the remote control to select a track.

Searching for a Specific Music Passage on a CD

When listening to a compact disc, you can quickly search for a specific music passage on a track.

To search for...	Press ...
Forwards	▶▶
Backwards	◀◀

You can also press and hold the I◀◀, ▶▶I button on the main unit to automatically scan for a track.

Repeat One or All Tracks on the Compact Discs

You can repeat playing CD unlimitedly:

- CD containing a specific track.
- Whole tracks of a selected CD.

1. Press the **REPEAT** button.
   Each time you press the **REPEAT** button, the repeat mode will change as following:

   MP3: OFF → TRACK → DIR → ALL → RANDOM
   CD: OFF → TRACK → ALL → RANDOM
2. When you wish to stop the Repeat function, press the **REPEAT** button until "**OFF**" is displayed.
   - **OFF**: Cancels Repeat Playback.
   - **TRACK**: Repeatedly plays the selected track.
   - **DIR**: Repeatedly plays all tracks in the selected folder.
   - **ALL**: Repeatedly plays the entire disc.
   - **RANDOM** : Plays tracks in random order.

Downloaded From Disc-Player.com Samsung Manuals

A-B Repeat Playback

You can repeatedly play back a designated section of a CD.

1. Press the **REPEAT A-B** button at the beginning of desired part.
   - **'RPT A'** will be displayed.
2. Press the **REPEAT A-B** button at the ending of desired part.
   - **'RPT AB'** will be displayed.
3. To cancel **REPEAT A-B** function, press the **REPEAT A-B** button again.
   - **'OFF'** will be displayed.

➢ REPEAT A-B function is available within a track.

10 Skip Function

Press the **+10** or **-10** button while in playback mode. This will skip the tracks as many as 10 or -10 from the current track.

CD Programming

This function is not available during playback of an MP3/WMA-CD.

- You can program the playback order of up to 24 tracks of your choice.
- However, you must stop playing the CD before selecting tracks.

1. While in CD playback mode, press the **STOP**(■) button to stop playing the CD.
2. Press the **ENTER ( )** button to display the message below:

   P01 --

   (01= program number, --= track number)
3. Use the ⏮ or ⏭ button to move to a desired track.
   - Press ⏮ to move to the previous track.
   - Press ⏭ to move to the next track.
4. Press the **ENTER ( )** button to confirm your selection, the selection is stored and P02 -- is displayed.
5. To select a different track, following the steps 3 to 4 above.
6. Press the **PLAY** (▶) button to play the programmed tracks.
7. Press the **STOP**(■) button to stop playing the programmed tracks, Press the **STOP** (■) button again to cancel playing the programmed tracks.
   - If you open the disc tray or turn off the product, your programming will be canceled.

Checking or Editing the Programmed Tracks

You can check a list of programmed tracks and edit them as you want.

1. If a programmed track is being played, press the STOP (■) button once.
2. Press the **ENTER ( )** button twice to display the message below:

   C01 02

   (C=Check, 01= program number)

   ➢ If a total of 24 tracks are already programmed, "**C**" will be displayed rather than "**P**" in the display.
3. Repeat pressing the **ENTER ( )** button until the desired track is displayed.
4. Press the ⏮ or ⏭ button to select a different track.
5. Press the **ENTER ( )** button to confirm your selection.
6. To play the programmed tracks, press the **PLAY** (▶) button.

Auto Change Function

You can circularly play between the disc and the USB.

1. Press the **AUTO CHANGE** button on the main unit. Each time press this button, the mode will switch as following:

   AUTO CHANGE OFF ➞ AUTO CHANGE ON

   - When the auto change mode is "ON", the music will be played on **DISC→USB1→USB2** continuously.
   - When the auto change mode is "ON", if you press the **POWER** button, function change button or the **OPEN/CLOSE** button, the auto change function automatically switches to "OFF" mode.
   - When USB is playing, if you disconnected the USB, the auto change function automatically switches to "OFF" mode.
   - When the auto change mode is "ON", the recording can't work.
   - When the auto change mode is "ON", the REPEAT, SLEEP function can't work and automatically changes to OFF.
   - When the auto change mode is "ON", the REC SPEED, USB 2 REC, REPEAT, PROGRAM, DELETE and SLEEP function can't work.
   - If there's no USB 1, it will jump to USB 2.
   - If there's no USB 2, it will jump to DISC or USB 1.

Downloaded From Disc-Player.com Samsung Manuals

Playing USB

Connect an external storage device such as USB flash memory or external HDD (Hard Disk Drive) to the product. You can play files in MP3/WMA format.

Before you begin!

- Connect the external USB storage device to your product.
- Select the USB mode by pressing the **USB 1** or **USB 2** button on the main unit or select the **USB 1** or **USB 2** by pressing the **FUNCTION** button on the remote control.
- The first track of the first directory plays automatically, and the play order is as below:

  If you select USB1, USB1 → STOP.
  If you select USB2, USB2 → STOP.

➢ **To stop playing**
Press the **STOP** (■) button to stop playing.

➢ **To remove the USB device**
If you press the **STOP** (■) button once again, you can remove the USB device safely.

☛ Do not connect a USB recharger to the USB port of this product. Otherwise, the product may be damaged.

To Select a Track from USB Device

You can select an MP3 file during the play.

➢ If you want to move the next/previous(track), press the ⏮,⏭ buttons shortly.

- It moves the next/previous file within the directory.
- If you press the ⏮,⏭ buttons more times than the number of the files in the directory, it will move over to the next directory.

To Search a Folder Quickly

1. Press the **TUNING/ALBUM** button on the remote control to move to the previous/next folder.
2. When the searching is done, you will see the previous/next folder name. The track will start playing.

To repeat

1. Press the **REPEAT** button.
   Each time you press the **REPEAT** button, the repeat mode will change as following:
   OFF → TRACK → DIR → ALL → RANDOM
2. When you wish to stop the Repeat function, press the **REPEAT** button until "**OFF**" is displayed.

- **OFF**: Cancels Repeat Playback.
- **TRACK**: Repeatedly plays the selected track.
- **DIR**: Repeatedly plays all tracks in the selected folder.
- **ALL**: Repeatedly plays all tracks.
- **RANDOM**: Plays tracks in random order.

To Use High Speed Search

You can search the desired section quickly during the play.

➢ Press the ◀◀,▶▶ button.
- Each time you press the button, you will move forward/backward fast.

☛ The sound will not output in fast playback mode.

To delete a file

You can delete a file on your USB device.

1. Play a file you want to delete.
2. Press the **DELETE** button.
3. Press ⏮,⏭ on the remote control to select YES.
   - To cancel the selection, press the **RETURN** button on the main unit.
4. Press the **ENTER** button on the remote control.
   The selected file will be deleted.

☛ The NTFS file system is not supported.

To skip next 10 tracks

1. Press the **+10** or **-10** button while in playback mode.
   This will skip the tracks as many as 10 or -10 from the current track.

Read through the instructions below before using the USB storage

- Some USB devices may not work properly with this product.
- This product supports only an external HDD that is formatted in FAT file system.
- USB 2.0 HDD should be connected to a separate power source. Otherwise, the USB 2.0 HDD will not work at all.
- If an USB external storage is connected to multiple devices, only the MP3 files in the first HDD will be played.
- DRM-applied files are not supported. Digital Right Management:This will restrict unauthorized access to a DRM file so that the copyright of the file is protected from piracy.
- Even if the extension of the file is .mp3, the file cannot be played if it is formatted in MPEG layer1 or 2.
- Do not use an unrecognized USB hub.
- Only the first 15 characters of a MP3/WMA file are displayed.
- Only removable HDDs with less than 160GB are supported. Depending on the device, a 160GB- or more removable HDD may not be supported.
- It will take several minutes to recognize the files in the selected USB device.
- The USB device (USB HDD, in particular) may cause a delay to move to the next track.
- The USB storage supporting only USB VER1.1 may perform a slow access or may not recognize the file properties.

Downloaded From Disc-Player.com Samsung Manuals

Setting the Clock

For each step, you have a few seconds to set the required options. If you exceed this time, you must start again.

1. Switch the system on by pressing the **POWER** (⏻/I) button.
2. Press the **TIMER SET** button and then press the **ENTER** (↵) button, "CLOCK" is displayed.
3. Press the **ENTER** (↵) button, the hour flashes.
   - Increase the hours: ∧
   - Decrease the hours: ∨
4. When the correct hour is displayed, press the **ENTER** (↵) button, the minutes flashes.
   - Increase the minutes: ∧
   - Decrease the minutes: ∨
5. When the correct minute is displayed, press the **ENTER** (↵) button, "**TIME**" appears in the display.
   - The current time is now set.

➢
- You can display the time, even when you are using another function, by pressing the **TIMER SET** button once.
- You can also use ⏭ or ⏮ on the front panel instead of **TUNING/ALBUM** ∧ or ∨ button in step 3,4.

Timer Function

The timer enables you to switch the system on or off at specific times automatically.

- Before setting the timer, check that the current time is correct.
- For each step, you have a few seconds to set the required options. If you exceed this time, you must start again.
- If you no longer want the system to be switched on or off automatically, you must cancel the timer by pressing the **TIMER ON/OFF** button.

Example: You wish to wake up to music every morning.

1. Switch the system on by pressing the **POWER** (⏻/I) button.
2. Press the **TIMER SET** button until **TIME** is displayed.
3. Press the **ENTER** (↵) button.
   Result: **ON** is displayed for a few seconds, you can set the timer switch-on time.
4. Set the timer switch-on time.
   a Press the **TUNING/ALBUM** ∧ or ∨ button to set the hours.
   b Press the **ENTER** (↵) button.
   Result: The minutes flash.
   c Press the **TUNING/ALBUM** ∧ or ∨ button to set the minutes.
   d Press the **ENTER** (↵) button.
   Result: **OFF** is displayed for a few seconds, you can now set the timer switch-off time.
5. Set the timer switch-off time.
   a Press the **TUNING/ALBUM** ∧ or ∨ button to set the hours.
   b Press the **ENTER** (↵) button.
   Result: The minutes flash.
   c Press the **TUNING/ALBUM** ∧ or ∨ button to set the minutes.
   d Press the **ENTER** (↵) button.
   Result: **VOL XX** is displayed, where **XX** corresponds to the volume already set.
6. Press the **TUNING/ALBUM** ∧ or ∨ button to adjust the volume level and press the **ENTER** (↵)button.
   Result: The source to be selected is displayed.
7. Press the **TUNING/ALBUM** ∧ or ∨ button to select the desired source to be played when the system switches on.

If you select...	You must also...
FM/AM (radio)	**a** Press the **ENTER** (↵) button. **b** Select a preset station by pressing the **TUNING/ALBUM** ∧ or ∨ button.
CD/MP3 (compact disc)	Load one compact disc.
USB1/USB 2	Connect the USB device.

8. Press the **ENTER** (↵) button.
   Result: **CHKREC** (Do you want to record?) is displayed.
9. Press the **ENTER** (↵) button.
   Result: **REC N** is displayed, you can press the **TUNING/ALBUM** ∧ or ∨ button to select the **REC Y** or **REC N**, and then press **ENTER** (↵) button.

1) If you select the **REC N**, it will cancel tuner timing recording even if you have already set the tuner timing recording.
2) If you select the **REC Y**, you can set the tuner timing recording.
a. Press the **ENTER** (↵) button.
   Result: **ON** is displayed for a few seconds, you can set the tuner timing recording switch-on time.
b. Press the **ENTER** (↵) button.
   Result: **OFF** is displayed for a few seconds, you can set the tuner timing recording switch-off time.

➢
- The maximal tuner timing recording time is 5 hours.
- If the timer switch on and off times are identical, the word **ERROR** is displayed.
- You may use ⏭, ⏮ buttons on the main unit to instead of the **TUNING/ALBUM** ∧ or ∨ button to adjust in step 4 to 9.
- If the switch-on or -off time is the same as the timing recording time, only the switch-on or -off time is effective, and the timing recording time is not applied.
- If the auto timer is turned on,the MP3/CD or USB function may require an additional step to be activated depending on the disc(or device). So it is better for you to select the tuner function instead.

Cancelling the Timer

After having set the timer, it will start automatically as shown by the TIMER indication on the display. If you no longer wish to use the timer, you must cancel it.

To...	Press the TIMER ON/OFF button....
Cancel the timer	Once. Result: ◷ is no longer displayed.
Restart the timer	Twice. Result: ◷ is displayed again.

- When you select the TIMER OFF mode, the TIMER RECORDING and TIME function are not available.

Downloaded From Disc Player-sm Samsung Manuals

Listening a Radio

You can store up to:

15 FM stations, 15 AM stations (optional).

1. Select **FM** or **AM** by pressing the **TUNER/AUX** button on the main unit.
   You can select **FM** or **AM** by pressing the **FUNCTION** button on the remote control.

2.

To search for a station	Press TUNING MODE button
Preset	Once or more times until **PRESET** is displayed. You can search the stored frequencies in the Preset mode.
Manually	Once or more times until **MANUAL** is displayed. You can search the frequencies one by one in the Manual mode.

3. Select the station to be stored by:
   - Pressing the **TUNING/ALBUM** ∧ or ∨ button on the remote control button to select the preset station.
   - Press and hold the **TUNING/ALBUM** ∧ or ∨ button on the remote control to automatically search for active broadcasting stations.
4. Press the **MO/ST** button to switch between stereo and mono.
   - In a poor reception area, select **MONO** for a clear, interference-free broadcast.
   - This applies only when listening to an FM station.
5. If you do not want to store the radio station found, revert to Step **3** and search for another station.
   Otherwise:
   a. Press the **ENTER** button.
   b. Or, press the **TUNING/ALBUM** button on the remote control to select a program number.
   c. Press the **ENTER** button to save the preset.
6. To store any other radio frequencies required, repeat Steps **3** to **4**.

➢ **In Tuner mode**
- In the Manual mode, you can use ⏮ or ⏭ button on the main unit to manual search a radio station.
- In the Preset mode, you can use ⏮ or ⏭ button on the main unit to search a stored radio station.

Selecting a Stored Station

You can listen to a stored radio station as following:

1. Select **FM** or **AM** by pressing the **TUNER/AUX** button on the main unit.
   You can select **FM** or **AM** by pressing the **FUNCTION** button on the remote control.
2. Press the **TUNING MODE** button on the remote control until "**PRESET**" is displayed.
3. Press ⏮,⏭ button on the main unit or **TUNING/ALBUM** ∧ , ∨ on the remote control to select a desired preset number.

Recording Function

You can record sound of the CD, the Radio Broadcasting or sound from the external source into the USB storage device.

1. Connect the external USB storage device you want to record to the USB 2 (⇠ 2 REC) on your product.
2. Play a Disc, adjust the Radio frequency or connect the external source to your product.

   CD
   - Press the **MP3/CD** on the main unit to select the CD function.
   - Press the **OPEN/CLOSE** button to open the disc tray.
   - Insert a CD and press the **OPEN/CLOSE** button to close the disc tray.
   - Use the CD selection (⏮ or ⏭) buttons to select the desired song.

   Tuner
   - Select TUNER by pressing the **TUNER/AUX** button on the main unit.
   - Adjust the Radio frequency you want to record.

   External Source
   - Connect an External Component/MP3 player to your product.
   - Press the **TUNER/AUX** button to select <AUX> input.
   - Play a song from the external device.

   USB 1
   - Connect an USB to USB 1 jack of your product.
   - Press the **USB 1** button to select USB 1.
   - Play a song from the USB 1.
3. Press the **USB REC** button on the remote control or the **USB 2 REC** button on the main unit to start recording.

   CD
   - "TRACK RECORDING" is displayed and CD recording starts.
   - Press and hold the **USB REC** button on the remote control or press and hold the **USB 2 REC** button on the main unit to start recording the all tracks of Disc. "FULL CD RECORDING" is displayed.
   - If you play the MP3/WMA file, the file is copied into the USB device totally.
     "CHECK FILE"→"COPY xx"→"COPY END" is displayed. When the recording is done, "STOP" will be displayed.
   - If there is the same file name, "FILE EXIST" is displayed, and the function is canceled.

   Tuner /External Source
   - RECORDING is displayed.
4. To stop recording, press the **STOP** (■) button and then automatically create and save as the MP3 file.
5. To remove the USB device safely, press the **STOP** (■) button once again. After the recording, a directory named "RECORDING"(CD), "CD COPY"(MP3 CD), "TUNER RECORDING" or "AUX RECORDING" will be created in your device.

➢
- Do not disconnect the USB or the AC Cord during the recording as this may cause file damage.
- If you disconnected USB device during the recording, the main unit will be power off and you may not delete the recorded file, In this case, please connect the USB device to the PC and backup the USB data on the PC first and then format the USB device.

Downloaded From Disc-Player.com Samsung Manuals

- When the USB memory is not enough, it will be displayed "NOT ENOUGH MEMORY".
- The recording works if the USB device or the HDD is formatted in the FAT file system. (The NTFS file system is not supported.)
- When you use CD high speed search function, the CD recording can't work.
- Sometimes, the recording time may be longer with some USB devices.
- In the program mode, you can't use the CD recording function.
- When the CD recording, the EQ and GIGA SOUND functions can not work and automatically change to OFF.
- When the CD recording, the REPEAT function can not work and automatically changes to OFF.
- If you use the MIC function during the CD recording, the voice from the microphone will be recorded.
- You can not record the radio when searching or no available frequencies in the Tuner mode.
- Note that setting the input level too loud when recording music from an external device through the AUX and USB channel may introduce noise into the recording. In that case, lower the external device's volume level.

Recording Speed

You can select the recording speed before recording.

Each time you press the CD REC SPEED button on the remote control, the recording speed will change as following:

RECORD SPD x 1➞RECORD SPD x 4

- While the Tuner or External Source is recording, the recording speed does not supported.
- When you select **RECORD SPD x 4**, the audio sound will not be output.
- If you connected the Microphone, you just have one recording speed mode: RECORD SPD x 1.
- During recording, if you disconnect the Microphone, the recording will stop, even if you reconnect the Microphone, it will still stop.

GIGA SOUND function

The GIGA Sound Function amplifies bass and improves bass twice as much for you to appreciate powerful real sound.

1. Press the **GIGA SOUND BLAST** button on the main unit or the **SOUND** button on the remote control. Each time press this button, the sound will switch as following:

   ADAPTIVE ➞ OFF ➞ GIGA SOUND
2. To cancel this function, press the **GIGA SOUND BLAST** button until the "**OFF**" is displayed.
   - The **GIGA SOUND** mode may be different depending on your region.

Selecting EQ Mode

Your mini-compact system supports the predefined equalizer settings between high and low frequencies to be in harmonious with the current music genre.

1. Press the **EQ** button.
   Each time you press this button, the sound mode will switch as following:
   OFF➞FLAT➞RANCHA➞SAMBA➞CUMBIA➞HABANA ➞BOOMBA➞REGGAE➞PARTY➞POP ➞HIPHOP ➞ROCK➞JAZZ➞CLASS➞STA+EQ➞DYN+S➞MP3+ ➞VIR+S➞U1 B 0 ➞ U2 B 0 ➞ U3 B 0
2. Set the BASS, MIDDLE, TREBLE level.
   Press the **ENTER** button when you select the U1 B 0 ➞ U2 B 0 ➞ U3 B 0
   Result: The BASS level flash.
   Press the **TUNING/ALBUM** ∧ or ∨ button to select from -06 to 06.
   Press the **ENTER** button.
   Result: The MIDDLE level flash.
   Press the **TUNING/ALBUM** ∧ or ∨ button to select from -06 to 06.
   Press the **ENTER** button.
   Result: The TREBLE level flash.
   Press the **TUNING/ALBUM** ∧ or ∨ button to select from -06 to 06.
   Press the **ENTER** button.
   Result: setting is completed.

Selecting USER EQ Mode

You can directly select the user EQ mode by press the USER EQ button.

1. Press the **USER EQ** button on the main unit until the required option is selected.
   Each time you press this button, the sound mode will switch as following:
   OFF ➞ U1 B 0 ➞ U2 B 0 ➞ U3 B 0
2. You can refer the above to set the BASS, MIDDLE, TREBLE level.

- When CD Recording, the EQ/USER EQ function can't work and the EQ/USER EQ automatically switches to "OFF" mode.
- If no buttons is pressed within 8 seconds, your settings will automatically be cancelled and the previous settings will be saved.
- The EQ mode may be different depending on your region.

Using the DYNAMIC SPOT Mode

You can directly select the Dynamic spot mode for listening music.

1. Press the **DYNAMIC SPOT** button on the main unit.
   Each time you press this button, the sound mode will switch as following:

   DYN+S ➞ OFF
   - The **DYNAMIC SPOT** mode may be different depending on your region.

Downloaded From Disc-Player.com Samsung Manuals

Using the Stadium Mode

You can directly select the Stadium mode for listening music. (MX-E750/E751 only)

1. Press the **STADIUM** button on the main unit.
   Each time you press this button, the mode will switch as following: **STA+EQ ➞ OFF**
   - The **STADIUM** mode may be different depending on your region.

Party function

You can choose a desired party mode.

1. Press the **PARTY** button. Each time press this button, the party mode will switch as following:

   MX-E750/E751:
   PARTY 1 ➞ PARTY 2 ➞ PARTY 3 ➞ OFF
   MX-E760/E761/E770/E771:
   PARTY 1 ➞ PARTY 2 ➞ PARTY 3

Connecting Microphone

You can also insert microphone to sing along with your favorite CDs.

1. Connect the microphone to the MIC jack on the front of the product.
   - If your microphone with a larger jack than 3.5ø MIC jack, you need a Connector-Adaptor(optional) to complete the connection.
     - First, connect the Connector-Adaptor to the MIC jack on the front of the product,
     - Second, connect the microphone (with larger jack) to the Connector-Adaptor.
2. Press the **MIC VOL-, +** button to adjust the volume of the microphone.
3. Press the **MY KARAOKE** button to suppress the Vocal. Each time the button is pressed, the selection is changed as follows: MIN ➞ MAX ➞ OFF.

- If you hear strange noises (squealing or howling) while using the Karaoke feature, move the microphone away from the speakers. Turning down the microphone's volume or the speaker volume is also effective.
- The microphone does not operate in the AUX, TUNER mode.
- If you connect with the Microphone, GIGA SOUND will automatically turn off. Even if you remove the microphone, it will not turn on.
- After setting my karaoke, EQ/GIGA SOUND does not work.
- After the stop operation, the setting of my karaoke will disappear.
- Only when connected with a Microphone, the MY KARAOKE function is available.

Troubleshooting

Refer to the chart below when this unit does not function properly. If the problem you are experiencing is not listed below or if the instruction below does not help, turn off the unit, disconnect the power cord, and contact the nearest authorized dealer or Samsung Electronics Service Center.

Symptom	Check/Remedy
I cannot eject the disc.	• Is the power cord plugged securely into the outlet? • Turn off the power and then turn it back on.
Playback does not start immediately when the Play/Pause button is pressed.	• Are you using a deformed disc or a disc with scratches on the surface? • Wipe the disc clean.
Sound is not produced.	• No sound is heard during fast playback, slow playback. • Are the speakers connected properly? Is the speaker setup correctly customized? • Is the disc severely damaged?
The remote control does not work.	• Is the remote control being operated within its operation range of angle and distance? • Are the batteries drained?
• The product is not working. (Example: The power goes out or the front panel key doesn't work or a strange noise is heard.) **• The product is not working normally.**	• While “NO DISC” message appears on the display of the product, press and hold the **STOP** (■) button on the main unit for longer than 5 seconds with no disc (reset function). Using the **RESET** function will erase all stored settings. Do not use this unless necessary.
Can't receive radio broadcast.	• Is the antenna connected properly? • If the antenna's input signal is weak, install an external FM antenna in an area with good reception.

Downloaded From Disc-Player.com Samsung Manuals

Specifications

General	Weight (MX-E750/E751)	3.54 Kg
	Dimensions (MX-E750/E751)	233 (W) x 351 (H) x 300 (D) mm
	Weight (MX-E760/E761)	4.2 Kg
	Dimensions (MX-E760/E761)	233 (W) x 373 (H) x 300 (D) mm
	Weight (MX-E770/E771)	4.26 Kg
	Dimensions (MX-E770/E771)	233 (W) x 373 (H) x 300 (D) mm
	Operating Temperature Range	+5°C~+35°C
	Operating Humidity Range	10 % to 75 %
FM Tuner	Signal/noise ratio	55 dB
	Usable sensitivity	12 dB
	Total harmonic distortion	0.6 %
AM Tuner (optional)	Signal/noise ratio	35 dB
	Usable sensitivity	70 dB
	Total harmonic distortion	4 %
CD Disc	CD : 12 cm (COMPACT DISC)	Reading Speed : 4.8 ~ 5.6 m/sec.
		Maximum Play Time : 74 min.
Amplifier		MX-E750/E751- 480 Watts (MAX. THD)
	Front speaker output	160 W/CH (4 Ω/100 Hz)
	Subwoofer	160 W (5 Ω/100 Hz)
		MX-E760/E761- 650 Watts (MAX. THD)
	Front speaker output	200 W/CH (6 Ω/100 Hz)
	Subwoofer	250 W (5 Ω/100 Hz)
		MX-E770/E771- 1000 Watts (MAX. THD)
	Front speaker output	190 W/CH (6 Ω/100 Hz)
	Rear speaker output	95 W/CH (12 Ω/100 Hz)0
	Subwoofer	215 W/CH (5 Ω/100 Hz)
	Frequency range	20 Hz~20 KHz
	S/N Ratio	75 dB
	Channel separation	50 dB
	Input sensitivity	(AUX)800 mV

*: Nominal specification

- Samsung Electronics Co., Ltd reserves the right to change the specifications without notice.
- Weight and dimensions are approximate.
- Design and specifications are subject to change without prior notice.
- For information on the power supply and power consumption, refer to the label attached to the product.

Downloaded From Disc-Player.com Samsung Manuals

Contact SAMSUNG WORLD WIDE

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care centre.

Area	Contact Center☎	WebSite
▪ North America		
Canada	1-800-SAMSUNG (726-7864)	www.samsung.com
Mexico	01-800-SAMSUNG (726-7864)	www.samsung.com
U.S.A	1-800-SAMSUNG (726-7864)	www.samsung.com
▪ Latin America		
Argentine	0800-333-3733	www.samsung.com
Brazil	0800-124-421 / 4004-0000	www.samsung.com
Chile	800-SAMSUNG (726-7864)	www.samsung.com
Colombia	01-8000112112	www.samsung.com
Costa Rica	0-800-507-7267	www.samsung.com
Dominica	1-800-751-2676	www.samsung.com
Ecuador	1-800-10-7267	www.samsung.com
El Salvador	800-6225	www.samsung.com
Guatemala	1-800-299-0013	www.samsung.com
Honduras	800-7919267	www.samsung.com
Jamaica	1-800-234-7267	www.samsung.com
Nicaragua	00-1800-5077267	www.samsung.com
Panama	800-7267	www.samsung.com
Peru	0-800-777-08	www.samsung.com
Puerto Rico	1-800-682-3180	www.samsung.com
Trinidad & Tobago	1-800-SAMSUNG (726-7864)	www.samsung.com
Venezuela	0-800-100-5303	www.samsung.com
▪ Europe		
Albania	42 27 5755	-
Austria	0810 - SAMSUNG (7267864, € 0.07/min)	www.samsung.com
Belgium	02-201-24-18	www.samsung.com/be (Dutch) www.samsung.com/be_fr (French)
Bosnia	05 133 1999	-
Bulgaria	07001 33 11	www.samsung.com
Croatia	062 SAMSUNG (062 726 7864)	www.samsung.com
Czech	800-SAMSUNG (800-726786) Samsung Zrt., česká organizační složka, Oasis Florenc, Sokolovská394/17, 180 00, Praha 8	www.samsung.com
Denmark	70 70 19 70	www.samsung.com
Finland	030 - 6227 515	www.samsung.com
France	01 48 63 00 00	www.samsung.com
Germany	01805 - SAMSUNG (726-7864 € 0,14/Min)	www.samsung.com
Hungary	06-80-SAMSUNG (726-7864)	www.samsung.com
Italia	800-SAMSUNG (726-7864)	www.samsung.com
Kosovo	+381 0113216899	-
Luxemburg	261 03 710	www.samsung.com
Macedonia	023 207 777	-
Montenegro	020 405 888	-
Netherlands	0900-SAMSUNG (0900-7267864) (€ 0,10/Min)	www.samsung.com
Norway	815-56 480	www.samsung.com
Poland	0 801 1SAMSUNG (172678) / 022-607-93-33	www.samsung.com
Portugal	80820-SAMSUNG (726-7864)	www.samsung.com
Rumania	1. 08010 SAMSUNG (72678) - doar din rețeaua Romtelecom, tarif local 2. 021.206.01.10 - din orice rețea, tarif normal	www.samsung.com
Serbia	0700 Samsung (0700 726 7864)	www.samsung.com
Slovakia	0800-SAMSUNG (726-7864)	www.samsung.com
Spain	902-1-SAMSUNG (902 172 678)	www.samsung.com
Sweden	0771 726 7864 (SAMSUNG)	www.samsung.com
Switzerland	0848-SAMSUNG (7267864, CHF 0,08/min)	www.samsung.com/ch www.samsung.com/ch_fr/(French)
UK	0330 SAMSUNG (7267864)	www.samsung.com
Eire	0818 717100	www.samsung.com
Lithuania	8-800-77777	www.samsung.com
Latvia	8000-7267	www.samsung.com
Estonia	800-7267	www.samsung.com
▪ CIS		
Russia	8-800-555-55-55	www.samsung.com
Georgia	0-800-555-555	-
Armenia	0-800-05-555	-
Azerbaijan	0-88-555-55-55	-
Kazakhstan	8-10-800-500-55-500 (GSM: 7799)	www.samsung.com
Uzbekistan	8-10-800-500-55-500	www.samsung.com
Kyrgyzstan	00-800-500-55-500	www.samsung.com
Tadjikistan	8-10-800-500-55-500	www.samsung.com
Ukraine	0-800-502-000	www.samsung.ua www.samsung.com/ua_ru
Belarus	8-10-800-500-55-500	-
Moldova	0-800-61440	-
▪ Asia Pacific		
Australia	1300 362 603	www.samsung.com
New Zealand	0800 SAMSUNG (0800 726 786)	www.samsung.com
China	400-810-5858 / 010-6475 1880	www.samsung.com
Hong Kong	(852) 3698 4698	www.samsung.com/hk www.samsung.com/hk_en/
India	3030 8282 / 1800 110011 / 1800 3000 8282 / 1800 266 8282	www.samsung.com
Indonesia	0800-112-8888 / 021-5699-7777	www.samsung.com
Japan	0120-327-527	www.samsung.com
Malaysia	1800-88-9999	www.samsung.com
Philippines	1-800-10-SAMSUNG(726-7864) / 1-800-3-SAMSUNG(726-7864) / 1-800-8-SAMSUNG(726-7864) / 02-5805777	www.samsung.com
Singapore	1800-SAMSUNG (726-7864)	www.samsung.com
Thailand	1800-29-3232 / 02-689-3232	www.samsung.com
Taiwan	0800-329-999	www.samsung.com
Vietnam	1 800 588 889	www.samsung.com
▪ Middle East		
Bahrain	8000-4726	www.samsung.com
Egypt	08000-726786	www.samsung.com
Jordan	800-22273	www.samsung.com
Morocco	080 100 2255	www.samsung.com
Oman	800-SAMSUNG (726-7864)	www.samsung.com
Saudi Arabia	9200-21230	www.samsung.com
Turkey	444 77 11	www.samsung.com
U.A.E	800-SAMSUNG (726-7864)	www.samsung.com
▪ Africa		
Nigeria	0800-SAMSUNG (726-7864)	www.samsung.com
South Africa	0860-SAMSUNG (726-7864)	www.samsung.com

Code No. AH68-02453B(Rev 0.0)

Downloaded From Disc-Player.com Samsung Manuals